


INSTALLATION INSTRUCTIONS

WMG-2C-50K-U | WMG-2C-50K-V
WMG-3C-50K-U | WMG-4C-50K-U
LED Glass Wallpack

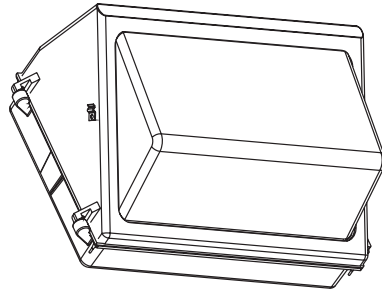

SAFETY PRECAUTION:

- **CAUTION:** This product uses an input 100-277VAC (WMG-XC-50K-U) & 347-408VAC (WMG-2C-50K-V) wide range driver, but the actual working voltage is dependent on the input voltage of the optional photocell installed on the product. Normally the input voltage of photocell is 120V/208V/240V/277V/347V/480V single range, or it could be 120-277VAC & 347-480VAC wide range. Please pay attention when installing.
 - **WARNING:** To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all applicable electrical codes
 - **WARNING:** To avoid electric shock be certain electrical power is OFF before and during installation and maintenance.
 - **WARNING:** To avoid electric shock luminaire must be connected to a wiring system with an equipment-grounding conductor.
 - **WARNING:** Make sure the supply voltage is the same as the rated luminaire voltage.
 - **WARNING:** Do not install where marked operating temperatures exceed the ignition temperature of the hazardous atmosphere.
 - **WARNING:** Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- SUITABLE FOR USE IN WET LOCATIONS
FOR SUPPLY CONNECTIONS USE WIRE RATED FOR AT LEAST 90°C.
AMBIENT TEMP: -20-+40°C

INSTALLATION:

ALWAYS TURN OFF THE POWER SUPPLY FROM MAIN CIRCUIT BREAKER FIRST!

1. Open the back of the box by using a philips screw driver. (See Fig. 1) Refer to the size indicated on the diagram to bore holes into the wall. (See Fig. 2)
2. Screw the two green/yellow grounding cords to the position which indicated "GR" (See Fig. 3)
3. Install the rear cover on the wall and connect the supply lines, referring to the circuit diagram (See Fig. 4)
4. Tighten enclosure screws to seal fixture.

