



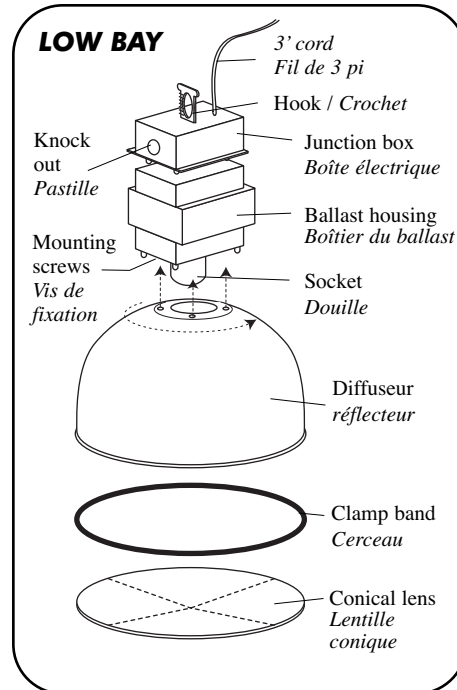

HIGH BAY AND LOW BAY SERIES CLOCHES (HI-BAY ET LOW-BAY)

HB-400-HPS-MT-16 LB-400-HPS-MT-22 LB-250-HPS-MT-22
 HB-400-MH-MT-16 LB-400-MH-MT-22 LB-250-MH-MT-22
 HB-250-HPS-MT-16 LB-250-HPS-MT-16 LB-400-HPS-MT-22-PCW
 HB-250-MH-MT-16 LB-250-MH-MT-16 LB-400-MH-MT-22-PCW

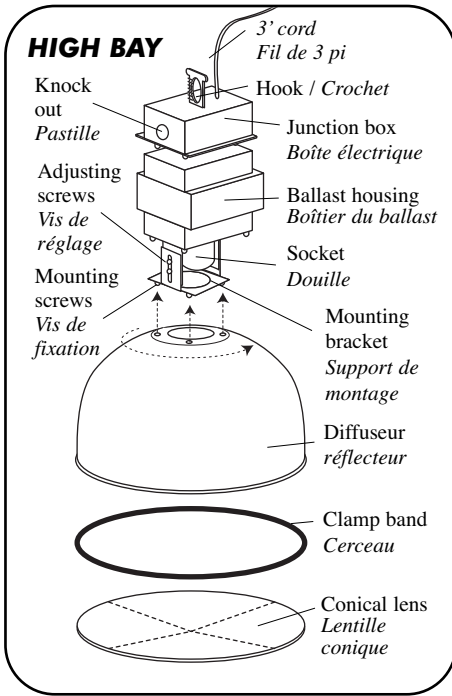

READ ALL INSTRUCTIONS PRIOR TO INSTALLATION

WARNING

- Installation must be done in accordance with local and CEC electrical code requirements.
- Fixture must be installed by a qualified electrician.
- Disconnect power supply before installation or servicing of fixture.
- This unit is pre-wired for 347V. (Plug not included.)

IMPORTANT

This fixture is intended to be used as general lighting in an open-air environment. Do not install fixture in an enclosed ceiling, dead air, sheltered or boxed-in location. It is not intended to be used in potentially dangerous locations containing flammable or explosive materials.

CORD AND PLUG CONNECTION

1. Select appropriate plug (120V, 277V or 347V type) and connect to the end of cord for plug-in connection.
2. Select appropriate ballast input voltage per installation instruction below.

INSTALLATION

1. Mount fixture to the surface or hang from a suitable hanger device capable of supporting fixture weight.
2. Remove junction box cover.
3. Remove side knock out on junction box cover.
4. Check to ensure supply voltage is 347V.
5. Select appropriate ballast input lead and connect supply leads to ballast input leads; black supply wire to black fixture wire, white supply wire to white fixture wire and ground supply wire to green fixture wire. Secure with wire connectors.
6. Cap unused ballast input leads.
7. Replace junction box cover.

8. HIGH BAY FIXTURES

Secure reflector/difusser to mounting bracket and

ballast housing assembly with pre-installed mounting screws.

To adjust light distribution, loosen screws on side of mounting bracket. Move bracket up and down to desirable position and tighten screws again.

LOW BAY FIXTURES

Secure reflector/difusser to ballast housing assembly with pre-installed screws

LAMP INSTALLATION & REPLACEMENT

CAUTION – DISCONNECT POWER SUPPLY BEFORE INSTALLING OR REPLACING LAMP

1. Prior to installing lamp, check lamp replacement label for appropriate type and wattage
2. Screw lamp securely into socket. Back the lamp out one to two turns and secure it back in to make sure that it seats properly in the socket.
3. If fixture is equipped with conical lens, release clamp band and remove lens for lamp installation or replacement.

NOTE

A solution of water and detergent can be used to clean plastic diffuser and conical lens.

LIRE LES DIRECTIVES AVANT L'INSTALLATION

AVERTISSEMENT

- L'installation doit être conforme aux codes locaux et au CCÉ.
- Le luminaire doit être installé par un maître-électricien.
- Coupez le courant avant l'installation ou l'entretien du luminaire.
- Le luminaire est câblé 347 V (sans fiche).

IMPORTANT

Ce luminaire sert à l'éclairage général en plein air.

Ne l'encastrez pas dans un plafond, ne le posez pas dans un endroit renfermé, protégé ou emboîté. Il ne doit pas être installé dans un milieu possiblement dangereux contenant des matières inflammables ou explosives.

FIL ET FICHE

1. Choisissez la fiche appropriée (120 V, 277 V ou 347 V) et connectez-la au bout du fil pour un branchement avec fiche.
2. Choisissez la tension d'entrée appropriée pour le ballast en suivant les directives.

INSTALLATION

1. Fixez le luminaire à la surface ou suspendez-le à un crochet capable d'en supporter le poids.
2. Enlevez le couvercle de la boîte électrique.
3. Enlevez la pastille sur le côté de la boîte.
4. Assurez-vous que le secteur est de 347 V.
5. Choisissez les fils de ballast appropriés et connectez-les aux fils du secteur : fil noir de secteur au fil noir du luminaire, fil blanc de secteur au fil blanc du luminaire, fil de terre au fil de terre vert du luminaire. Protégez les connexions avec des marrettes.
6. Capuchonnez les fils inutilisés.
7. Remettez le couvercle de la boîte électrique.
8. **CLOCHES HI-BAY**

Posez le réflecteur/difusser sur le support et le boîtier du ballast à l'aide des vis fournies.

Pour ajuster la distribution légère, desserrez les vis du côté du support. Ajustez la support en haut et en bas sur la position souhaitable et serrez les vis encore.

CLOCHES LOW-BAY

Posez le réflecteur/difusser sur le boîtier du ballast avec les vis déjà en place.

POSE ET REMPLACEMENT DE L'AMPOULE

MISE EN GARDE – COUPEZ LE COURANT AVANT DE POSER OU DE REMPLACER L'AMPOULE

1. Avant de poser l'ampoule, vérifiez l'étiquette d'information sur le luminaire pour connaître le type et l'intensité appropriés.
2. Vissez bien l'ampoule dans la douille. Dévissez l'ampoule d'un ou deux tours puis revissez-la pour vous assurer qu'elle repose bien dans la douille.
3. Si le luminaire possède une lentille conique, desserrez le cerceau et enlevez la lentille pour poser ou remplacer l'ampoule.

REMARQUE

On peut utiliser une solution d'eau/détergent pour nettoyer le diffuseur et la lentille conique en plastique.



Imported exclusively by • Importateur en exclusivité :

Liteline Corporation

Email • Courrier élec. : info@liteline.com

Website • Site web : www.liteline.com

Toll free technical support • Soutien technique téléphonique sans frais : 1-866-730-7704