




## INSTALLATION INSTRUCTIONS LED Tube Ready Strip

### SAFETY PRECAUTIONS:


- WARNING: RISK OF FIRE OR ELECTRIC SHOCK. THE INSTALLATION SHOULD BE PERFORMED ONLY BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND RELEVANT LOCAL CODES. THIS PRODUCT MUST BE INSTALL IN FULL ACCORDANCE WITH APPLICABLE.
- TO PREVENT ELECTRICAL SHOCK, MAKE SURE TO TURN OFF MAINPOWERS SWITCH PRIOR TO THE INSTALLATION.

### WIRING DIAGRAMS:


#### TYPE B(BYPASS) SINGLE TUBE:

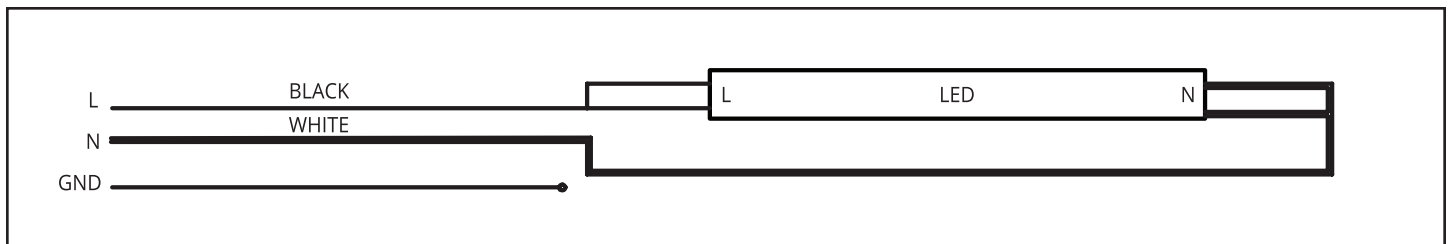


#### TYPE B(BYPASS) DOUBLE TUBE:

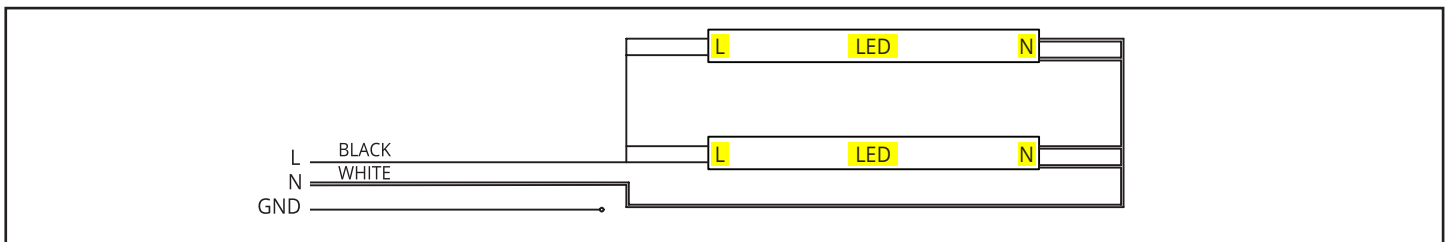

#### TYPE C SINGLE TUBE:

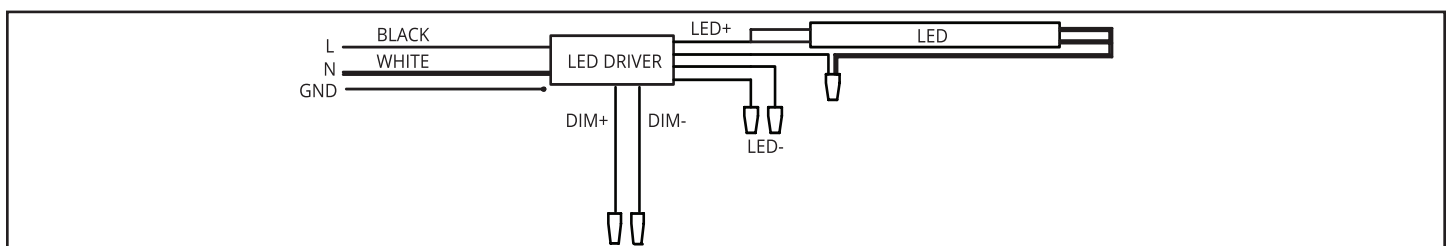

#### TYPE C DOUBLE TUBE:

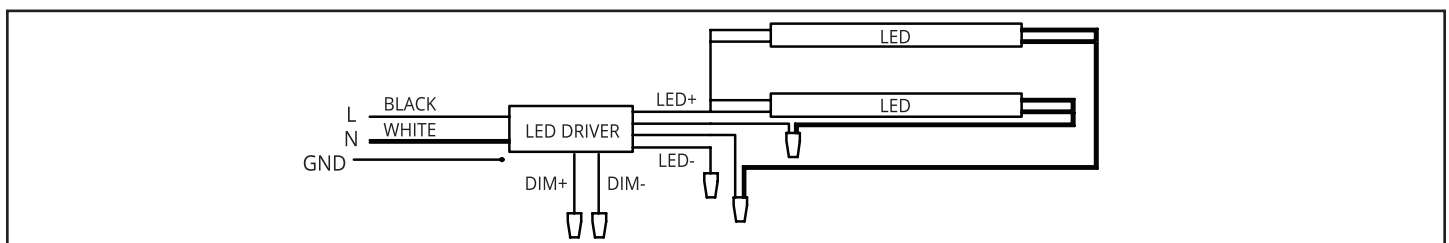

## INSTALLATION:

**ALWAYS TURN OFF THE POWER SUPPLY FROM MAIN CIRCUIT BREAKER FIRST!**

1. REMOVE THE COVER (C) BY UNSCREWING THE TWIST LATCH (E) FROM THE EIGHTER END.
2. FIX THE SOCKET USING THE SCREW.
3. USE THE LUMINAIRE AS A TEMPLATE BY PLACING IT ON THE JUNCTION BOX AND PENDING IN THE FOUR HOLE POSITION. PUT THE LUMINAIRE ASIDE AND DRILL THE FOUR HOLES. INSERT AN ANCHORING BOLT (NOT INCLUDED) INTO EACH HOLE.
4. SECURE THE LUMINAIRE INTO PLACE WITH THE HELP OF MOUNTING SCREWS (NOT INCLUDED) MAKING SURE TO PASS THE JUNCTION BOX CABLES ON THE SIDE IF THE LUMINAIRE.
5. CONNET LUMINAIRE WIRES TO JUNCTION BOX WIRES (WIRE CONNECTORS NOT INCLUDED) AS FOLLOWS: GROUND WIRE TO MANUFACTURE'S GROUND WIRE LIVE WIRE TO MANUFACTURE'S POWER WIRE. NEUTURAL WIRE TO MANUFACTURER'S NEUTAL WIRE.
6. PUT THE COVER (C) ON THE INSTALLED LUMINAIRE AND SECURE INTO PLACE WITH THE TWIST LATCH (E) AND THE SCREW (F) FROM EITHER END. CAUTION! CAREFULLY PUCH THE CONNECTING WIRES INTO THE LUMINAIRE.
7. INSTALL THE LAMPS IN THE LUMINAIRE.
8. TURN ON THE LUMINAIRE.

